

DISCO STRINGS

For MOTIF XF



By

Keyboard Waves

Make Your Keyboard Sound Better

OWNER'S MANUAL

INTRODUCTION

Thank you for purchasing the Keyboard Waves «Disco Strings» library for the Yamaha Motif XF synthesizer/workstation. This library consists of 8 new User Voices, utilizing over 100 MB of new disco strings samples. Instructions for loading are included in this manual.

Product Description

Disco Strings library programmed by Keyboard Waves

XF FORMAT

- * Format: ALL (.X3A)
- * Name: Disco Strings XF v1.1.n3.X3A
- * Size: 109,5MB
- * SDRAM OK: Library requires Flash Board
- * Voices: 8 User Voices
- * Bank loads to: User Bank 4

The Voices Descriptions USER 4 BANK

Number	Name	Description
001 (A01)	Disco Strings (with falls)	Mainpatch of Disco Strings
002 (A02)	Attack Strings	Fast Attack Strings
003 (A03)	Super Strings	Superstrings Samples Patch
004 (A04)	Falls Strings	Only Falls
005 (A05)	Tremolo Strings	Tremolo to the max
006 (A06)	Arco Strings	Only Random Arco Samples
007 (A07)	Slow Strings	Long Attack for Ballad
008 (A08)	Disco Strings (w/o falls)	No Falls Samples on Top Velocity

CONTROLLERS

CC Number	Name	Description
1	MW (Modulation Wheel)	Tremolo
22	Ribbon	Reverb Send
16	Assignable Fonction 1	2 Octaves

LOADING INSTRUCTION

WARNING – FIRST BACK UP YOUR DATA !

LOADING TO A MOTIF XF

FROM THE DOWNLOADED ZIP FILE TO USB DEVICE (JUMP DRIVE or FLASH DRIVE)

1. Insert your USB device into your computer's available USB slot. Its' icon should appear on your desktop.
2. If it isn't already open, navigate to the "Disco Strings XF v1.1.n3" folder and double-click on it to open it.
3. Copy the file called "Disco Strings XF v1.1.n3.X3A" to your USB device's icon (by either dragging the file directly to the icon, or going to your file menu and choosing "Copy" and "To" and selecting the USB device as your destination).
4. When the file has copied completely to your USB device, properly eject the USB device and insert it in the slot labeled "TO DEVICE" on the rear panel of your Motif XF. You will see a screen message that says "Connecting to USB device..."
5. Press the FILE button on the front panel of the Motif XF. You should see the field next to "Type" highlighted and it should be set to "all".
6. Press the cursor up button once, then use the INC/YES button to select the file name "Disco Strings XF v1.1.n3.X3A" The name should highlight.
7. Press the right cursor button once, so the "Type" field is highlighted again, then press the right cursor button again to move to and highlight the field next to "Load USR".
8. Press the SF2 button (Load). Then press the INC/YES button once.
9. The library will start loading. You will first see the onscreen message "Now Loading..."
10. The load process will finish and you will see another "Now Loading"... message onscreen, then the load process will complete.
11. Press the VOICE button on the XF, then Press the User 4 bank button, and press A 1 to select the first voice.

=====

The data and programming are owned by Keyboard Waves.
When you purchase these sounds you are purchasing a license to use them in your music productions as you see fit. Reselling, duplicating or uploading of Keyboard Waves products to any Internet BBS is prohibited and illegal.
Copyright ©2017 Keyboard Waves

=====