

# ***DISCO STRINGS***

*For MOTIF XS*



By

## ***Keyboard Waves***

**Make Your Keyboard Sound Better**

### **OWNER'S MANUAL**

# INTRODUCTION

Thank you for purchasing the Keyboard Waves «Disco Strings» library for the Yamaha Motif XS synthesizer/workstation. This library consists of 8 new User Voices, utilizing over 100 MB of new disco strings samples. Instructions for loading are included in this manual.

## Product Description

*Disco Strings library programmed by Keyboard Waves*

### XS FORMAT

- \* Format: ALL (.X0A)
- \* Name: Disco Strings XS v1.1.n3.X0A
- \* Size: 109,5MB
- \* Voices: 8 User Voices
- \* Bank loads to: User Bank 1

## The Voices Descriptions USER 1 BANK

Number	Name	Description
001 (A01)	Disco Strings ( with falls )	Mainpatch of Disco Strings
002 (A02)	Attack Strings	Fast Attack Strings
003 (A03)	Super Strings	Superstrings Samples Patch
004 (A04)	Falls Strings	Only Falls
005 (A05)	Tremolo Strings	Tremolo to the max
006 (A06)	Arco Strings	Only Random Arco Samples
007 (A07)	Slow Strings	Long Attack tor Ballad
008 (A08)	Disco Strings (w/o falls)	No Falls Samples on Top Velocity

## CONTROLLERS

CC Number	Name	Description
1	MW (Modulation Wheel)	Tremolo
22	Ribbon	Reverb Send
16	Assignable Fonction 1	2 Octaves

# HOW TO LOAD THE SOUNDS

## WARNING – BACK UP YOUR DATA FIRST

BEFORE YOU LOAD “Disco Strings XS”, MAKE SURE YOU HAVE BACKED UP (SAVED) ANY DATA IN YOUR MOTIF XS THAT YOU MAY WANT TO KEEP.

### FROM THE DOWNLOADED ZIP FILE TO USB DEVICE (JUMP DRIVE or FLASH DRIVE)

1. Insert your USB device into your computer’s available USB slot. Its icon should appear on your desktop.
2. If it isn’t already open, navigate to the “Disco Strings XS” folder and double-click on it to open it.
3. Copy the file called “Disco Strings XS v1.1.n3.X0A” to your USB device’s icon (by either dragging the file directly to the icon, or going to your file menu and choosing “Copy” and “To” and selecting the USB device as your destination).
4. When the file has copied completely to your USB device, properly eject the USB device and insert it in the slot labeled “TO DEVICE” on the rear panel of your Motif XS. You will see a screen message that says “Connecting to USB device...”.
5. Press the FILE button on the front panel of the Motif XS. Use the cursor buttons to move up to the top of the screen so that the “Device” field is highlighted and turns blue-green. If necessary, turn your jog wheel to the right until you see the name of your USB device in the field. This will indicate that your USB device has been selected.
6. Using the cursor buttons, cursor down to the field marked “Type” and make sure it is set to “all”.
7. Press the cursor up button one more time, then use the INC/YES button to select the file name “Disco Strings XS v1.1.n3.X0A.” The name should highlight in blue-green.
8. Press SF2 “LOAD” button. The “Disco Strings XS” library will load 8 voices to Voice User Bank 1. Press the VOICE button, then USER 1 button, then button A1 to begin.

**NOTE: When you power off your Motif XS, the sample loaded will be lost. You will have to re-load ‘Disco Strings XS v1.1.n3.X0A’ when you power up your Motif XS again.**

=====

The data and programming are owned by Keyboard Waves.  
When you purchase these sounds you are purchasing a license to use them in your music productions as you see fit. Reselling, duplicating or uploading of Keyboard Waves products to any Internet BBS is prohibited and illegal.  
Copyright ©2017 Keyboard Waves

=====